

SEM ROVER

Quick Setup



INSTRUCTIONS

1. Un-box the SEM Rover and check for all included parts.

2. Pin the handle in place at the highest position using the detent pin.




3. Plug one end of the tubing into the push-to-connect fitting in the round plate at the base of the unit.



4. Stretch the tubing along the handle to the inlet of the filter element and cut the tubing to the appropriate length so it installs and un-installs in the filter.



5. Remove the pin, place the handle in the low position and re-pin.

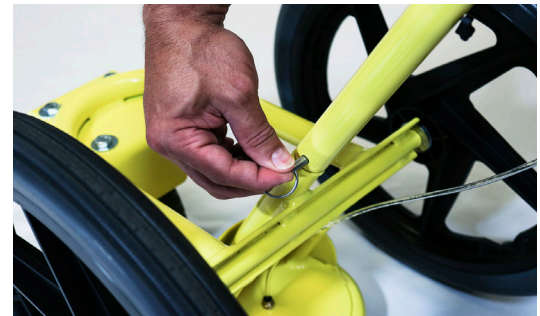

6. Snap the tubing into the tubing clips along the handle keeping the slack on the lower side.



7. Run the remainder of the tubing from the outlet of the filter to the SEM-5000.



8. Your Rover is now ready to be used. Once done working for the day, ensure the bottom of the unit is not cluttered with debris and check the filter element and replace as needed.

© Product designs and specifications are subject to change without notice. User is responsible for determining suitability of product.